

## Armrest Height Adjustment

Height adjustment procedure  
Pull the lever upwards and find the required position.



## Lumbar Support Adjustment

Lumbar support adjustment procedure  
Pull or push the lumbar support upwards or downwards to find the required position.



## Seat Depth Adjustment

Seat depth adjustment procedure  
Pull out the seat cover right lever and glide forwards or backwards.



## Armrest Expand Adjustment

Expand adjustment procedure  
Push the lever down and find the required position - pull the lever up to lock.




## Armrest Slide Adjustment

Armrest sliding procedure  
Push the armrest button and pull forwards, backwards, in and out to find the required position.



## Armrest Rotate Adjustment

Armrest sliding procedure  
Push the armrest button and push round to find the required position.

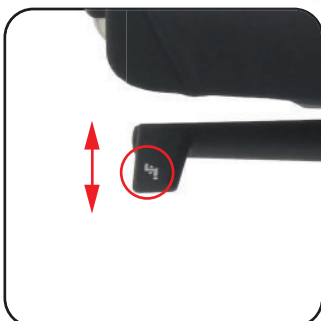

## Chair Height Adjustment

Height adjustment procedure  
Pull the right lever and find the required position



## Back Tilting

Locking procedure  
Find the required position and push the left lever downwards.

Unlocking procedure  
Pull the left lever upwards and give pressure on the backrest.

